

How to use HyperTerminal as online-receipt-copy

1. Program the receipt printer as usual (internal or external) in SYSTEM PARAMETER 9 and 10.
2. Program the slip printer as external printer. Use the port you have connected your PC with HyperTerminal. SYSTEM PARAMETER 17 and 18.
3. SYSTEM PARAMETER programming
The system can have two printers which are used to print the transaction receipts. You need to program the type of the printer in parameter 9 and 17, the port number in parameter 10 and 18. When the type is set to ZERO it means there is no printer used. The following types are available:

Value	Printer Type
0	No Printer Installed
1	Internal Matrix Quorion DP614
2	Internal Thermal 80 mm LTP2342
3	Epson TM-88II or compatible
4	Epson TM210 or compatible
5	Epson TMH5000 or compatible
6	Epson TM295 or compatible
7	Internal Thermal 2x38mm
8	Epson TM210 or compatible with 44mm paper (Dry Cleaning)
9	Internal Matrix 2x38 mm (Quorion DP630)
10	Epson TM300 or compatible
11	Epson TM950 or compatible
12	Quorion Thermal QPRINT PRP-80
13	Quorion Thermal TH-200
14	Quorion Thermal QPRINT PRP-80 with cutter disabled
15	Epson RP-U420 (2 station matrix) or compatible
16	Citizen CBM-262 (2 station thermal) or compatible
17	QUORION QPrint NRP-1800
19	Epson M-J7100 (with 76mm paper)(2 station inkjet)

4. Program HyperTerminal as follows:

