

Did you already know ...

that Seat Numbers for Tables are supported from version xx050105. The number of seats per table is programmed in Parameter 111:

- When you open a table by only entering the TABLE# it will ALWAYS select SEAT# 1 by default. The display will show "Table# X.1" where X is the TABLE#.
- On the Kitchen Printer it will also print "TABLE# X.1" so you can see to which seat the entry belongs.
- You can change SEAT# by entering the SEAT# on the SEAT# key (key code 280). When you change the SEAT# the register will close the current SEAT and send the information to the kitchen.
- It is possible to open a SEAT directly by entering the table number with a decimal point followed by the seat number. When you enter 2.3 it will open seat# 3 on table# 2.
- When an INVOICE is selected the register will prompt you for the type of INVOICE.
 - 1) All Combined (GENERAL TEXT# 62).
When selected the register will transfer all seats to a temporary table with number 1.0 and print the combined invoice.
 - 2) All Separate (GENERAL TEXT# 63).
When selected the register will print the Invoice for all seats used for this TABLE.
 - 3) Single/Group (GENERAL TEXT# 64).
When selected the register will print the Invoice for the current seat when closed directly with CASH or ORDERED. It is possible to select a number of seats by entering the seat number on the SEAT# key before CASH or ORDERED is pressed. Note that a seat number can be corrected with the E.C. (Error Correction) key.
- You can transfer a SEAT to another SEAT by using the TRANSFER key and then enter the new SEAT# on the SEAT# key.
- You can transfer a SEAT to another TABLE-SEAT by using the TRANSFER key and then enter the new TABLE-SEAT using decimal entry on the TABLE# key. For example 2.3 will transfer to table# 2 seat# 3.
- The register handles each seat as a separate balance. The only difference is that you can switch seats easily by using the SEAT# key and that you can combine at payment.